



# EXPLODED VIEW & PARTS LIST

## **1077 & 1077W RepeatAir® CO<sub>2</sub> Rifle**

CROSMAN CORPORATION  
RT 5 & 20  
EAST BLOOMFIELD, NY 14443

Phone: 1-800-724-7486  
Parts Order Fax: 585-657-5405

# 1077 & 1077W PART LIST

Manufacture Start Date: 10/01

<u>Part Number</u>	<u>Description</u>
<b>10604</b>	Retaining Ring
<b>10835</b>	Hammer Roller
<b>10895</b>	Receiver, Left Hand
<b>10896</b>	Receiver, Right Hand
<b>11392</b>	Stock Assembly (1077W)
<b>11399</b>	Band Screw (1077W)
<b>11400</b>	Stock Screw (1077W) (2x)
<b>11427</b>	Spacer (1077W)
<b>106-005</b>	Valve O-Ring
<b>106-008</b>	Valve Spring
<b>106-014</b>	Lever
<b>106-015</b>	Pawl
<b>106-016</b>	Index Spring
<b>106A010</b>	Detent Body
<b>106A046</b>	Detent Spring
<b>106B011</b>	Detent
<b>1077-001</b>	Loader (Not Shown)
<b>1077-002</b>	Loader Assembly
<b>1077-003</b>	Transfer Bar
<b>1077-004</b>	Clip, Left Hand
<b>1077-005</b>	Clip, Right Hand
<b>1077-006</b>	Barrel
<b>1077-007</b>	Latch
<b>1077-008</b>	Barrel Band
<b>1077-010</b>	Barrel Housing
<b>1077-014</b>	Trigger Spring
<b>1077-026</b>	Band Screw
<b>1077-028</b>	Valve Bushing
<b>1077-029</b>	Tube Bushing
<b>1077-030</b>	Hammer Assembly
<b>1077-031</b>	Tube Pin
<b>1077-032</b>	Shroud Screw (2x)
<b>1077-033</b>	Trigger Assembly
<b>1077-034</b>	Valve & Tube Assembly
<b>1077-035</b>	Barrel Housing Assembly
<b>1077-036</b>	Plug Assembly
<b>1077-039</b>	Spacer (1077)
<b>1077-040</b>	Safety
<b>1077-041</b>	Stock Screw (1077) (2x)
<b>1077-042</b>	Band Screw
<b>1077-045</b>	Loader Pin
<b>1077-053</b>	Valve Washer
<b>1077-054</b>	Butt Plate (1077)
<b>1077-055</b>	Latch Spring
<b>1077-056</b>	Latch Pivot Pin
<b>1077-057</b>	Valve Spacer
<b>1077A016</b>	Transfer Tube

<u>Part Number</u>	<u>Description</u>
<b>1077A017</b>	Tube
<b>1077A018</b>	Piercing Plug
<b>1077A019</b>	Stock (1077)
<b>1077A020</b>	Stock Assembly (1077)
<b>1077A037</b>	Tube Assembly
<b>1077A038</b>	Bushing Retainer
<b>1077A044</b>	Hammer Latch
<b>1077A046</b>	Knob Assembly
<b>1077A048</b>	Tube & Barrel Housing Assembly (1077)
<b>1077B015</b>	Valve Body
<b>1077B027</b>	Valve Assembly
<b>1077W-001</b>	Tube & Barrel Housing Assembly (1077W)
<b>130-032</b>	O-Ring (2x)
<b>130-034</b>	O-Ring
<b>2-041</b>	Frame Screw (5x)
<b>2-150</b>	Puck Assembly (Use 2-160)
<b>2-160</b>	Puck Assembly
<b>262A200</b>	Rear Sight
<b>338-041</b>	Guide Collar, Valve
<b>38-028</b>	Screen
<b>38-128</b>	End Seal
<b>38A027</b>	Piercing Pin
<b>40A028</b>	Valve Stem
<b>66-032</b>	Screw (2x)
<b>66-201</b>	Front Sight
<b>766-044</b>	Pivot Pin
<b>766-091</b>	Sear Spring
<b>766-107</b>	Elevator
<b>77-011</b>	Frame Screw

●This parts list is intended to be an informational guide in ordering parts. It is not instructional material and we therefore assume no responsibility for those who use the same without proper factory training.

●Please order by part number and description

●Check or money order for the total price must accompany the order.

●For current prices contact Crosman Corporation at 800-824-7486 or visit our website [www.crosman.com](http://www.crosman.com)

DATE	REV
11/7/00	1
2/21/06	2

# MODEL NO. 1077, 1077W

